

Signal Quality Tester
And
Beta Signal Integrity Tester
Users Guide
Version 1.8
8/24/09



i. Revision History

Revision	Date	Description
V1.0	2/5/08	Initial Version
V1.2	3/05/08	Added Beta Signal Integrity Tester
V1.3	3/26/08	Added Single Ended Support and Test Tone
V1.4	8/28/08	Added to Calibration Section
V1.5	8/29/08	Added more to Calibration Section
V1.6	9/05/08	Misc. Corrections, Added Overview
V1.7	12/2/08	Added TX Config settings
V1.8	8/24/09	Added Ethernet GPIB Setup Information

ii. Reference Documents

Document #	Title	Author
IEEE-1394b-2002	High Performance Serial Bus (Supplement)	IEEE
AS5643/1	Test Plan/Procedure for AS5643/1 S400 Copper Media Interface	SAE
2002005	Base 1394 Test Suite Definition with Extensions for 1394b	1394 Trade Association

iii. Table of Contents

Signal Quality Tester	1
And	1
Beta Signal Integrity Tester	1
Users Guide	1
1 Introduction	9
1.1 Signal Quality Tester Components	9
1.1.1 Signal Quality Tester	9
1.1.2 SQT Application Software	9
1.1.3 Test Point Board / Transmit Tester Cable	9
1.1.4 Receive Test Cables	10
1.1.5 Trigger Cable	10
1.1.6 DC Adaptor	10
1.2 Other Required Equipment	10
1.2.1 Host Computer	10
1.2.2 Microsoft Excel	10
1.2.3 Host PC Interface	11
1.2.4 GPIB Interface	11
1.2.5 Digital Oscilloscope / Differential Probe	11
2 Signal Quality Tester Tour	12
2.1 Front Panel	12
2.1.1 Host PC Connection	13
2.1.2 Power Light	14
2.1.3 TX Test Fixture Connector	14
2.1.4 Error Rate Connections	14
2.2 Back Panel	15
2.2.1 Tester Power	16
2.2.2 ON/OFF Switch	16
2.2.3 Trigger	16
3 Operational Overview	17
3.1 Transmit Test Overview	17
3.2 Receive Test Overview	19
3.3 Backchannel	21

4 Transmit Testing Procedure	23
4.1 Start Application	23
4.2 Physical Configuration	23
4.2.1 Host Computer / SQT	23
4.2.2 Oscilloscope GPIB/Ethernet	24
4.2.3 Oscilloscope Trigger	24
4.2.4 SQT to Test Point Board	25
4.2.5 Probe to Test Point Board	25
4.2.6 UUT Specific Test Point Boards	26
4.3 UUT Setup	27
4.3.1 Test Point Board to Unit Under Test	27
4.3.2 Name Results File	28
4.3.3 Test Options	28
4.3.4 Advanced Tab	30
4.4 Calibration	33
4.4.1 Probe to GND	33
4.4.2 Next / Reacquire	34
4.5 Port Test	35
4.5.1 Probe to TPx	35
4.5.2 End Test Button	36
4.5.3 Reacquire / Calculation	36
4.5.4 Reacquire / Next	38
4.6 Single Ended Measurements	38
4.7 Testing the Next Port	40
4.8 Test Completion	41
4.8.1 Remove Test Point Board from UUT	41
4.8.2 Next UUT	42
4.9 Transmit Signal Integrity Results File	43
4.9.1 Summary Page	43
4.9.2 Port Pages	44
4.9.3 Eye Pages	44
4.9.4 DFT Pages	44
4.9.5 Setups Page	44
4.9.6 Oscilloscope Pages	45
5 Receive Testing	46
5.1 Start Application	46

5.2	Physical Configuration.....	46
5.2.1	Host Computer / Signal Quality Tester.....	46
5.3	UUT Setup	46
5.3.1	Connect Unit Under Test	46
5.3.2	Name Results File	47
5.3.3	Test Options.....	47
5.3.4	Ports to Test and Test Levels	48
5.3.5	Auto Set Level	49
5.4	Test Status Pane	50
5.4.1	Current Test	51
5.4.2	Summary	52
5.5	Receive Signal Compatibility Results File	52
5.5.1	Parameters.....	53
5.5.2	Level	53
5.5.3	Errors.....	53
5.5.4	Raw Data.....	53
5.5.5	Confidence	54
5.5.6	Bits Required / Remaining.....	54
6	Calibration/Configuration	55
6.1	Test Amplitude Level	55
6.2	Near End and Far End Measurements	55
6.3	Observing Output Levels	58
6.4	When to Calibrate	59
6.5	Adjust Test Levels	60
6.5.1	Adjust All Ports.....	60
6.5.2	Adjust Individual Ports	61
6.6	Calibrate.....	62
6.6.1	Calibration Overview.....	63
6.6.2	Calibration Procedure	64
6.6.3	Measuring Amplitude procedure	65
7	GPIO/Ethernet Configuration	66
7.1	Configuring on First run	66
7.1.1	GPIO Resources	66
7.1.2	TCP/IP Resources	67
7.2	Changing Devices	70
8	System Requirements and Installation.....	72

8.1	Software Installation	72
9	Error Rate Port Parametrics	74
10	How to Contact Quantum Parametrics LLC	75

iv. Table of Figures

Figure 1 - Front Panel of SQT	12
Figure 2 - Front Panel of Beta Signal Integrity Tester	13
Figure 3 - Back Panel of SQT	15
Figure 4 - Back Panel of Beta Signal Integrity Tester	15
Figure 5 - Transmit Test Connection diagram.	18
Figure 6 – Test Fixture to UUT to Scope Probe Block Diagram.	19
Figure 7 - Three Port UUT to SQT connection diagram.	20
Figure 8 - Example, Testing Port 0 and Port 1.....	21
Figure 9 - To Host PC backchannel connection.....	22
Figure 10 - Host computer connection to SQT	23
Figure 11 - Trigger connection to Oscilloscope.....	24
Figure 12 - Test fixture connection.....	25
Figure 13 - Example Test Point Boards	26
Figure 14 - Test Point Board Connection	27
Figure 15 - Test result file naming	28
Figure 16 – Transmit test options	29
Figure 17 - Advanced transmit test options	30
Figure 18 - Differential probe calibration	33
Figure 19 - Accept or recalibrate	34
Figure 20 - Connection of probe for testing.....	35
Figure 21 - Reacquire or Calculate results	36
Figure 22 - Example oscilloscope capture	37
Figure 23 - Test results for port complete.....	38
Figure 24 - First single ended scope probe connection.....	39
Figure 25 - Second single ended scope probe connection	40
Figure 26 - Testing the next port.....	41
Figure 27 - Remove test point board.....	42
Figure 28 - Report closed and start next UUT test.....	43

Figure 29 - Connection UUT to SQT	47
Figure 30 - Connection UUT to SQT	50
Figure 31 - Rx test status pane.....	51
Figure 32 - Rx testing status pane.....	51
Figure 33 - Rx test summary pane	52
Figure 34 - View of templateReceive excel sheet paramaters..	54
Figure 35 - Near End Measurement Block Diagram.	55
Figure 36 - Far End Measurement Block Diagram.....	55
Figure 37 - C-1 Near End signal amplitude measurement.....	56
Figure 38 - SQT to 38999 Far End test fixture setup.....	57
Figure 39 - C-1 Far End signal amplitude measurement.	58
Figure 40 - Small Section of IEEE-1394b (beta) Tone.....	59
Figure 41 - Adjust output levels of all outputs.	61
Figure 42 - Selecting TEST LEVEL option.	62
Figure 43 - Calibration Area.	63
Figure 44 – Automation Resources with GPIB Resources	67
Figure 45 – TCP/IP Resource Verification Window	68
Figure 46 – Resource found.....	69
Figure 47 – TCP/IP resource selection list	70
Figure 48 – Change OScope button	71

[Initially left blank]

1 Introduction

The Quantum Parametrics Signal Quality Test System (QP-SQT) is a complete test system for Beta (1394b) testing transmit signal integrity and receive signal sensitivity, according to the AS5643/1 S400 Copper Media Interface Test Plan as well as the Base 1394 Test Suite Definition with Extensions for 1394b and potentially other standards. Currently the QP-SQT comes in an S400 (QP-SQT-4) and S800 (QP-SQT-8) versions. The S400 and S800 indicate the maximum data rate supported by the receive signal sensitivity test. The default configuration for the receiver sensitivity tester is capacitive coupled.

The transmit sections of this manual also apply to the Beta Signal Integrity Tester (QP-SIB4B (rev C)).

1.1 Signal Quality Tester Components

1.1.1 Signal Quality Tester

The Signal Quality Tester (SQT) provides hardware capabilities to test transmit signal integrity and receive signal compatibility.

1.1.2 SQT Application Software

The SQT application software controls the testing process and compiles the test results.

1.1.3 Test Point Board / Transmit Tester Cable

The test point boards provide quality connections of the oscilloscope probes to the Unit Under Test (UUT). The test point board connects to the tester via an included Transmit Tester Cable that provides 1394 connection tones to induce the UUT to transmit a signal. This cable also provides 3.3V out on

the other pair to power a buffer on multiple port test boards. This cable should only be used in conjunction with the Test Point Board and should never be plugged directly from the SQT to the UUT.

1.1.4 Receive Test Cables

Cables are used to connect the SQT to the UUT. These cables are not included with the QP-SQT. The user should adjust the C-1, C-2, and C-3 output test levels to account attenuation in the cable before testing. The test cable connects the SQT to the UUT for receive compatibility testing.

1.1.5 Trigger Cable

A coaxial cable with BNC fittings is provided to connect the SQT trigger out to the oscilloscope auxiliary trigger input.

1.1.6 DC Adaptor

A 12V DC power supply is included to power the SQT.

1.2 Other Required Equipment

1.2.1 Host Computer

The SQT application runs on a PC running Microsoft Windows XP. Minimal hard disk space and memory are required. Additional memory and faster processors will enable faster results processing.

1.2.2 Microsoft Excel

All raw test data is captured and analyzed in Microsoft Excel. Microsoft Excel 2003 is required on the host computer.

Microsoft Excel must be installed before installing the SQT application.

1.2.3 Host PC Interface

The SQT application communicates with the SQT instrument via IEEE-1394 (1394). The host computer must provide a 1394 interface. PCI, PCMCIA, and integrated 1394 host adapters are acceptable. NOTE: the PC host must support VersaPHY packets. The SQT has one 1394 bilingual connection (1) and two Beta only connections (0 and 2). The 1394 host adaptor must be installed before installing the SQT application. The SQT application installation will install custom 1394 drivers.

1.2.4 GPIB Interface

The SQT application utilizes an IEEE-488 GPIB interface to transfer setups and results. PCI-GPIB, USB-GPIB, and PCMCIA-GPIB interfaces are acceptable. The GPIB interface and associated driver software must be installed on the host computer before installing the SQT application.

1.2.5 Digital Oscilloscope / Differential Probe

Accurate testing of 1394b S400 signals requires a digital sampling oscilloscope and a differential probe with at least 2 GHz bandwidth and 10GSamples/second sampling rate. For 1394b S800 signals 4 GHz bandwidth and 20GSamples/second sampling rate is required. At these sampling rates the oscilloscope must acquire at least 3500 unit intervals. Specific oscilloscope model support is developed and tested one model at a time, usually at the customer's request. Contact Quantum Parametrics for the latest list of supported oscilloscopes.

2 Signal Quality Tester Tour

2.1 Front Panel



Figure 1 - Front Panel of SQT



Figure 2 - Front Panel of Beta Signal Integrity Tester

2.1.1 Host PC Connection

The SQT application communicates with the SQT instrument via IEEE-1394 (the Backchannel). The host computer must provide a 1394 open host controller interface (OHCI). The SQT has one bilingual (port 1) and two beta only ports (port 0 and 2). The Backchannel uses VersaPHY¹ technology for communication between the PC and the SQT. While VersaPHY is supported by most OHCI implementations, QP has found the TI TSB82AA2B OHCI IEEE-1394b controller does not support VersaPHY packets.

The SQT application installation installs custom 1394 drivers. These drivers should allow applications currently using 1394 to continue to use the 1394 ports. However, it is **STRONGLY RECOMMENDED** that the PC and SQT connection remain point-to-point while testing.

¹ VersaPHYTM is a trademark of Quantum Parametrics LLC, all rights reserved.

2.1.2 Power Light

If the Signal Quality Tester (SQT) is powered through the 12V jack and the on/off switch is in the *on* position, the Power LED should be illuminated.

2.1.3 TX Test Fixture Connector

The TX Test Fixture connector on the front of the tester is not a 1394 port. This connector connects to the appropriate Transmit Signal Test Fixture through a QP provided cable.

2.1.4 Error Rate Connections

The Error Rate Connections are labeled C-1, C-2, and C-3. These connections allow a two or three port device to be tested at a specific data rate and amplitude*.

*Please see the end of this document for legitimate test amplitudes.

2.2 Back Panel

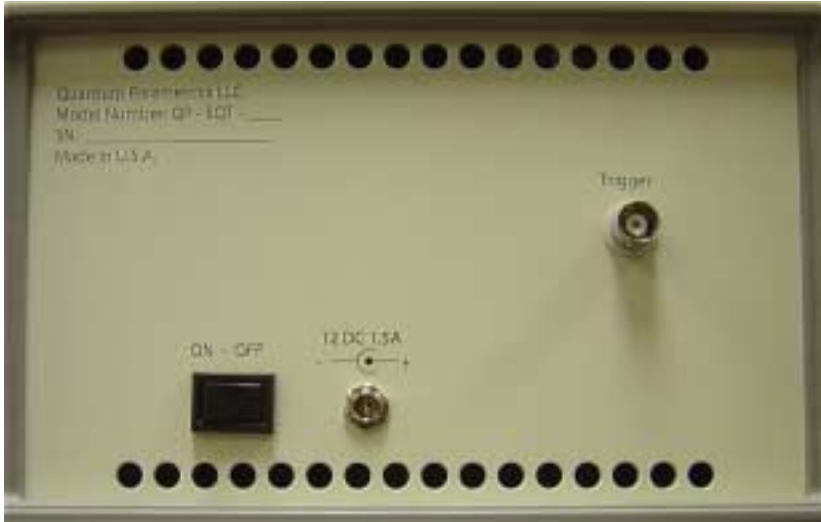


Figure 3 - Back Panel of SQT



Figure 4 - Back Panel of Beta Signal Integrity Tester

2.2.1 Tester Power

The SQT is powered by the included 12-volt power supply connected to the back of the tester.

2.2.2 ON/OFF Switch

The ON – OFF switch connects and disconnects the 12 volt power supply of the SQT internal circuitry.

2.2.3 Trigger

The BNC connects the SQT instrument to the oscilloscope auxiliary/trigger input. The trigger is used during the TX signal integrity test.

3 Operational Overview

The SQT is both a transmit quality and receiver sensitivity tester. The transmit quality tester is designed to measure the signal quality of the Unit Under Test (UUT) output. The receiver sensitivity tester is designed to determine either the receivers' ability to receive a signal or the cable media's ability to pass a quality signal.

3.1 Transmit Test Overview

The Transmit Tester is designed to measure the signal quality at the output of the UUT. This output may be at the near-end (at the receptacle of the UUT) or the far-end (at the end of a cable connected to the UUT). This is discussed in more detail in Section 6.

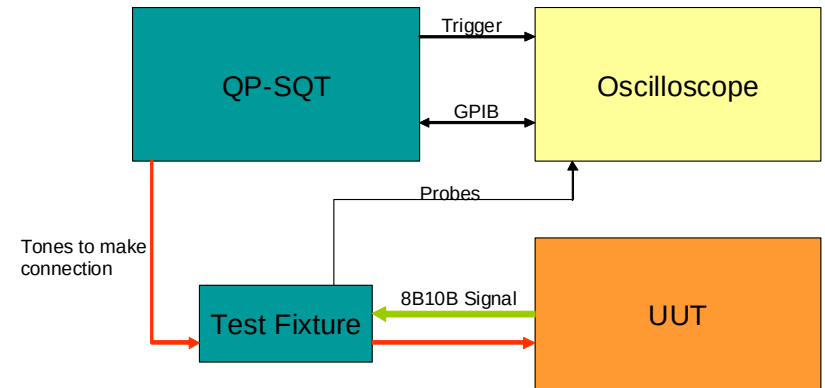


Figure 5 - Transmit Test Connection diagram.

The Transmit Interface is used to emulate the connection process of a 1394B PHY. The TX Test Fixture Connection sends the connection tones from the SQT through the test fixture to the UUT. The supplied cable goes from the **TX Test Fixture Connection** connector to the appropriate test fixture. The TX Test Fixture Connection and cable will not work as a regular 1394 cable and should only be used for the Transmit test. **Never** plug the supplied Transmit Tester cable directly from the Tx Test Fixture Connection into a UUT.

During the Transmit test, tones are sent out by the SQT to start the connection process. No high-speed signals are sent over the connection from the TX Test Fixture Connection to the Transmit Test Fixture Connection, only 50MHz tones. The test fixture terminates the high speed 8B10B signals (they are not passed through the test fixture). The differential pairs are terminated with 110Ω and a oscope probe specific series resistor is also provided.

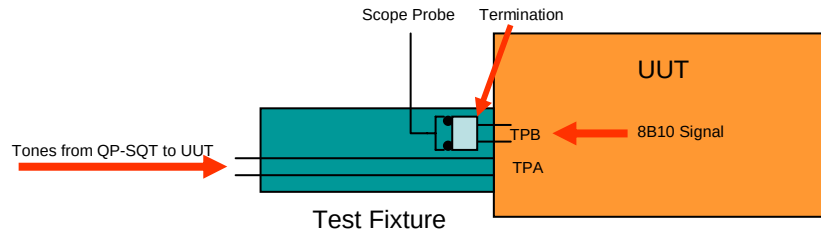


Figure 6 – Test Fixture to UUT to Scope Probe Block Diagram.

3.2 Receive Test Overview

The three, 1394B ports labeled C-1, C-2, and C-3 are used to execute the receive test. The Receive Tester is designed to determine the receiver's ability to receive a signal or the cable media's quality. C-1, C-2, and C-3 have configurable outputs which allow the user to adjust the signal amplitude to verify the UUT's receiver sensitivity. This can be done manually or automatically through the SQT software. Each port of the device (assuming the device has either 2 or 3 ports) is connected to the appropriate Receive port connections. The connection should be as follows: Port 0 connects to C-1, Port 1 to C-2, and Port 2 to C-3. If these are connected in such a way that the order is incorrect, the test will still run, but may report incorrectly as it expects the setup described in the previous sentence.

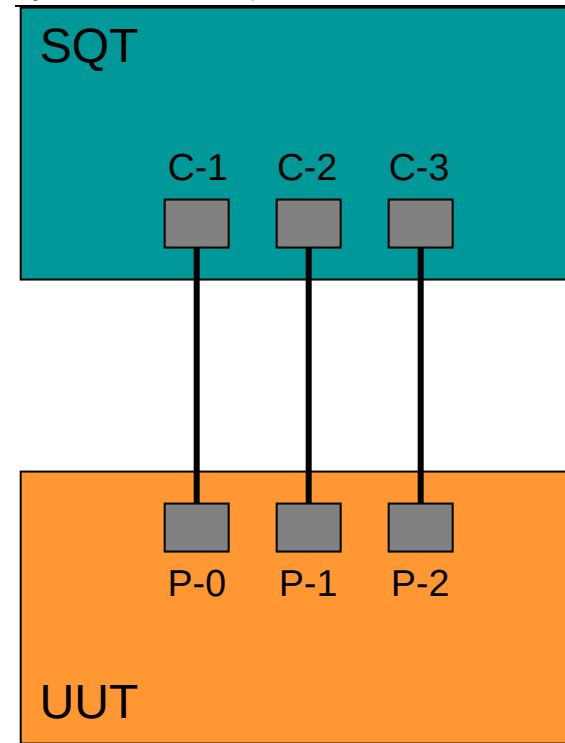


Figure 7 - Three Port UUT to SQT connection diagram.

While the test is running, the SQT configures itself into a three node topology consisting of the SQT C-X -- UUT -- SQT C-Y. Where X represents the SQT connection sending the data packet with the desired signal amplitude and Y represents the SQT connection receiving the data packet back from the UUT. Upon reception, the packets are compared to an expected value and errors are reported. The test continues in this manner until all ports are tested.

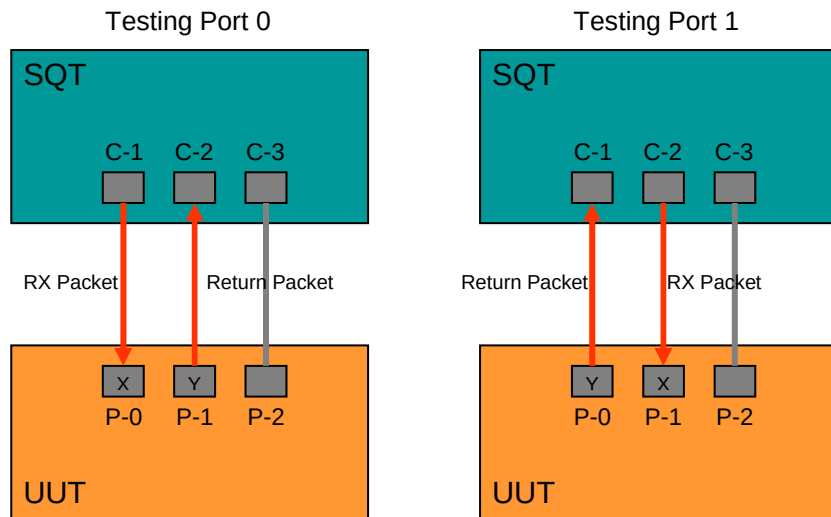


Figure 8 - Example, Testing Port 0 and Port 1.

3.3 Backchannel

The Backchannel (**To Host PC**) interface is the communication link between the SQT hardware and the SQT software. The middle port of the backchannel is a bilingual (1394A/B) port, while the two outer ports are 1394B only connections. The backchannel should only be connected to a 1394 Host controller that has the QPVP driver loaded.

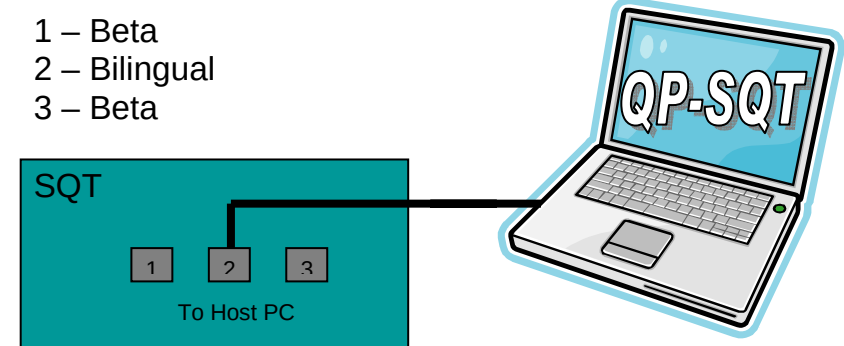


Figure 9 - To Host PC backchannel connection.

4 Transmit Testing Procedure

4.1 Start Application

Execute the QPSQT.exe file. After the Signal Quality Tester (SQT) is connected to the host computer (see below), select the Transmit tab at the top of the window to begin transmit testing.

4.2 Physical Configuration

4.2.1 Host Computer / SQT

If prompted on the main application window, connect the Signal Quality Tester to the host computer with an IEEE-1394 cable to one of the ports labeled 'To Host PC' on the front of the tester. If this connection is already made, the application may move to the next step.



Figure 10 - Host computer connection to SQT

4.2.2 Oscilloscope GPIB/Ethernet

The GPIB or Ethernet interface on the test host computer must be connected to the oscilloscope. The application first checks the GPIB connection when the Transmit tab is selected. If the connection is not found, the user is prompted to check the connection. The oscilloscope must also be powered on to pass this configuration check. QP recommends the National Instrument's GPIB-USB-HS GPIB controller or an Ethernet connection to the scope for use with our products. Please see the GPIB/Ethernet configuration section for more details.

4.2.3 Oscilloscope Trigger

The trigger output from the SQT must be connected to the auxiliary trigger input on the oscilloscope with a BNC terminated cable. The application is unable to verify this connection, so the user is always prompted to verify the connection before beginning transmit testing.

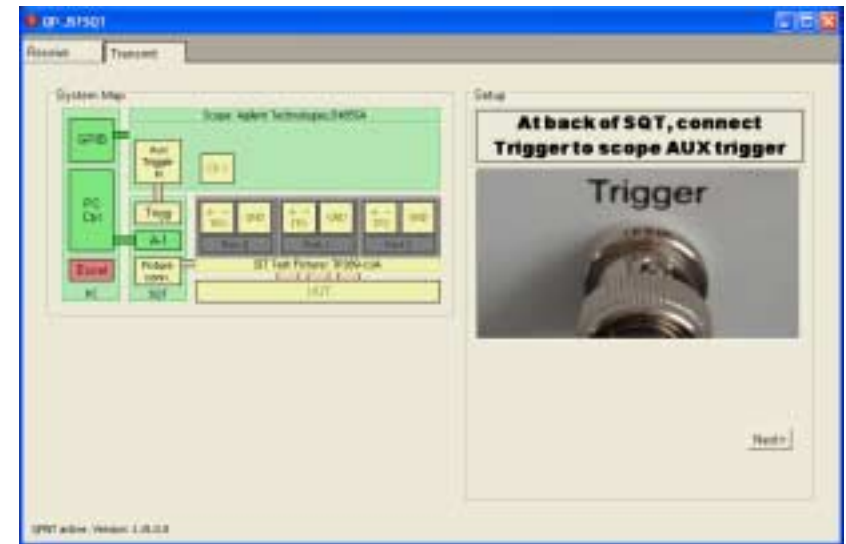


Figure 11 - Trigger connection to Oscilloscope

4.2.4 SQT to Test Point Board

The SQT connects to the Test Point Board via the supplied Transmit Test cable. The application is not able to verify this connection, so the user is always prompted to check it. Only the Test Point Board should be connected to the “Test Fixture” connector on the front of the Signal Quality Tester. **The Signal Quality Tester may be damaged if any 1394 device is connected to the Test Fixture connector.**

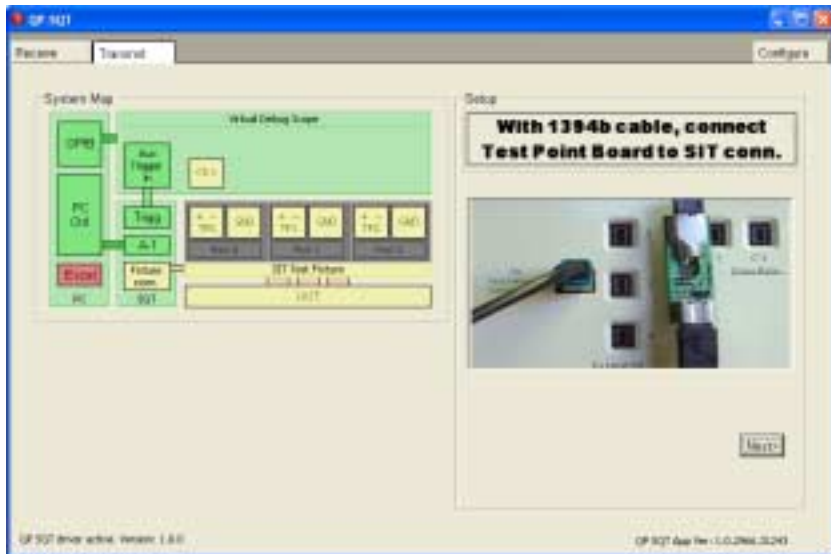


Figure 12 - Test fixture connection

4.2.5 Probe to Test Point Board

Depending on the Unit Under Test (UUT), Test Point Board may provide one or more test points designed to interface directly with differential oscilloscope probes. If using a 3 port Test Point Board, the UUT transmit differential signal pairs from port 0, port 1, and port 2 are routed to test points labeled TP0, TP1, and TP2 respectively. If the UUT has fewer than 3 ports then the Test Point Board may only support test points for

the supported ports. Pairs of test points labeled GND are also provided to collect calibration samples.

The application is pre-configured to collect information from a differential probe connected to oscilloscope channel 1.

The application is unable to verify this connection, so the user is prompted at each stage of the test to connect the probe to a specified test point. **If the oscilloscope probe is not connected to the specified test point during testing, invalid test results will be generated.** Wait until instructed by the application to connect the probe to the Test Point Board.

4.2.6 UUT Specific Test Point Boards

IEEE-1394 is used in diverse applications and these applications require multiple different types of connectors. Therefore, QP provides an ever-expanding list of Test Point Boards from the standard 1394b 9-pin connector to custom 38999 connectors. Please contact QP for the latest list of Test Point Boards. QP also provides custom design services and can create specific Test Point Boards to meet our customer's needs.



Figure 13 - Example Test Point Boards

4.3 UUT Setup

4.3.1 Test Point Board to Unit Under Test

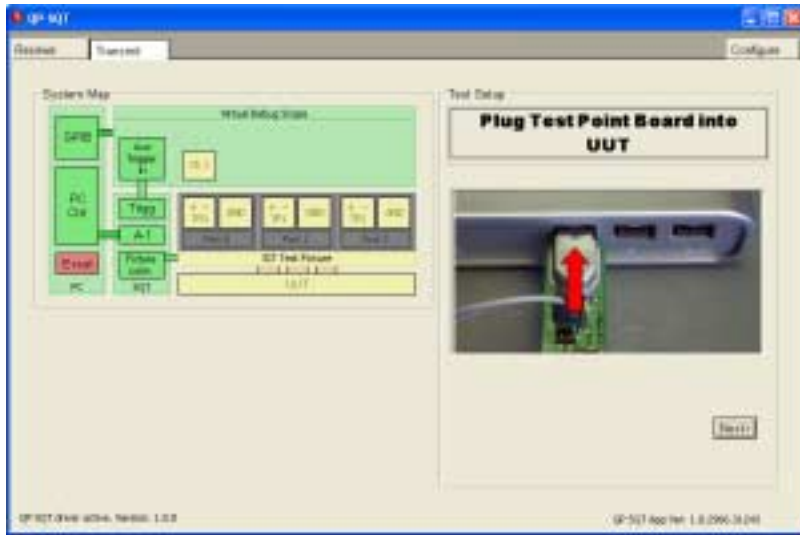


Figure 14 - Test Point Board Connection

The Test Point Board includes a connector to mate with the Unit Under Test (UUT). This connector is keyed to properly align the pins and sockets. The application is unable to verify this connection, so the user is always prompted to check it.

The UUT must be independently powered during testing. The SQT does not power the UUT.

4.3.2 Name Results File

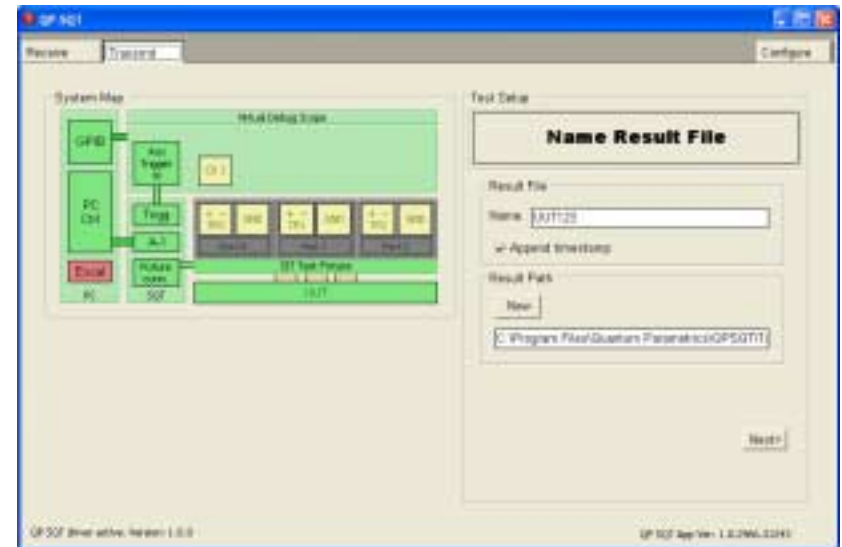


Figure 15 - Test result file naming

The user interface displays an input box to collect an identifier for the UUT. This identifier will be used in the file name and in the results summary.

The Append Timestamp to Filename check box may be selected to append a timestamp to the file name. This may be useful to allow many unique result files for one UUT.

Another input box is available to specify the path in which to store the results file.

4.3.3 Test Options

The Test Options screen allows the user to configure the test. Not all options are available for all configurations. For questions please contact Quantum Parametrics.

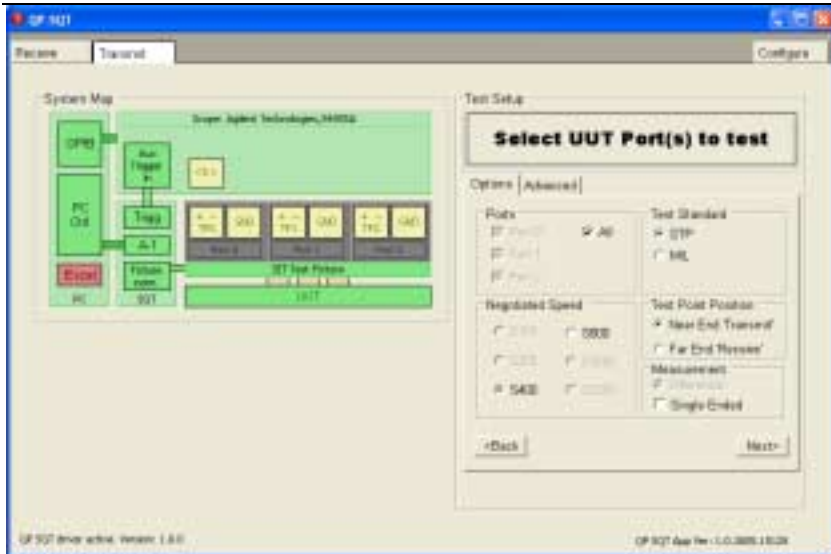


Figure 16 – Transmit test options

4.3.3.1 Ports

The test options screen allows the test to be run on any combination of up to 3 UUT ports.

4.3.3.2 Test Standard

The STP and MIL test standard options allow the user to select either IEEE-1394b-2002 shield twist pair parameters or SAE AS5643/1 S400 Military test standard.

4.3.3.3 Negotiated Speed

This version of the SQT only supports S400 and S800. The negotiated speed option allows the user to choose the connection speed and test parameters that will be used to calculate results and determine pass or fail.

4.3.3.4 Test Point Position

The SIA post processor supports both Near End (TP2) and Fair End (TP3) calculation algorithms. This option allows the user to select which ones apply to the measurement being taken.

4.3.3.5 Measurement

The Differential (always enabled) and Single Ended options let the user select whether differential skew and common mode measurements will be taken. If Single Ended is not selected these measurements will not be taken. NOTE: for AC coupled implementations, Single Ended measurements may not be valid.

4.3.4 Advanced Tab

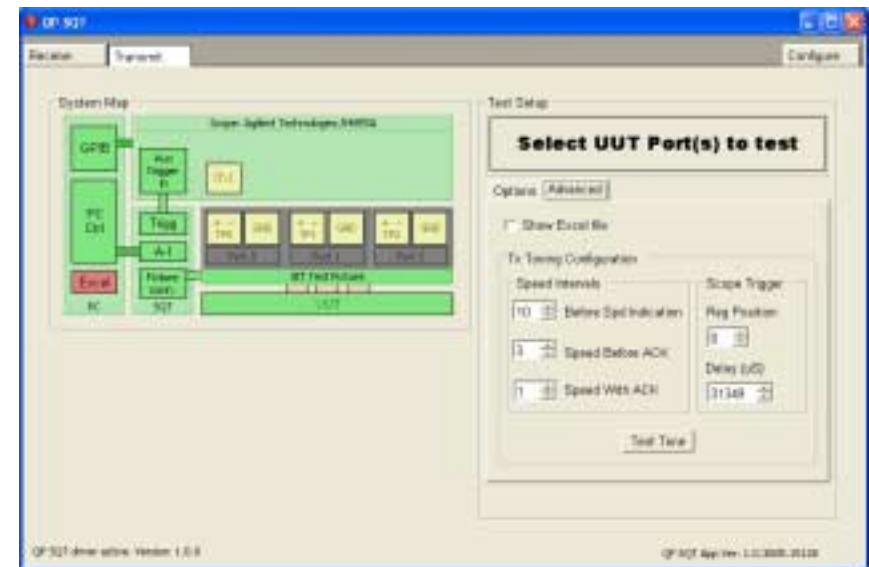


Figure 17 - Advanced transmit test options

Under the advanced tab on the options window, the Excel results file may be made viewable. If the Excel file is not

enabled to be viewable, an Excel file is still created and filled; it is just not visible on the desktop during the test.

4.3.4.1 Tx Toning Configuration

Depending on the UUT PHY silicon, the user may wish to adjust the connection tone sequence. The Tx Toning Configuration allows the user to do this.

Before Spd Indication – This is the number of start only tones before the first tone interval with a speed indication.

Speed Before ACK – This is the number of start and speed tones before the first tone interval with an acknowledge tone.

Speed With ACK – This is the number of start, speed and acknowledge tone intervals.

Scope Trigger allows the user to place the oscilloscope trigger 666 usec from the start of the last tone interval to the end of that tone interval. This timing may need to be adjusted depending on when the UUT starts training relative to the last tone interval.

Below is a table of the values that appear to work with the following BPHY's:

TI, Agere, Symwave, Fujitsu*:

Before Spd Indication:	10
Speed Before ACK:	2
Speed With ACK:	1
Delay:	35351

* - Tested with Fujitsu S400B part

4.3.4.2 Test Tone Button

The Test Tone Button is used to send the toning sequence specified in the Tx Toning Configuration. This feature allows the user to debug the response of the UUT to the tone sequence. If needed the user may change the oscilloscope setting to better show the interaction between tester and the UUT. To show the trigger position the user may elect to move the trigger from AUX IN to a free channel.

4.4 Calibration

Calibration is performed once per UUT to minimize the effect of any differential probe DC offset.

4.4.1 Probe to GND

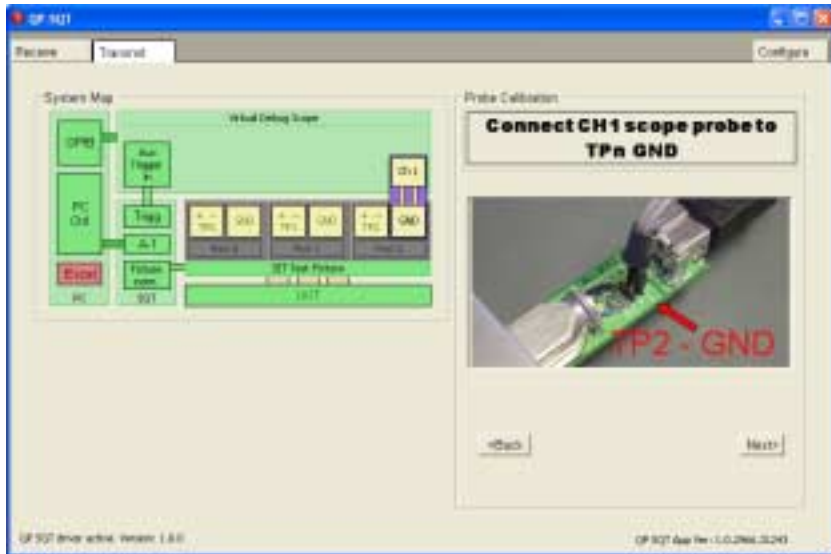


Figure 18 - Differential probe calibration

The application will instruct the user to connect the differential probe to GND test points. Click “Next” after this is manually verified.

At this point the application will configure the oscilloscope to capture the calibration samples, actually capture the calibration samples, and write them to the results file.

4.4.2 Next / Reacquire

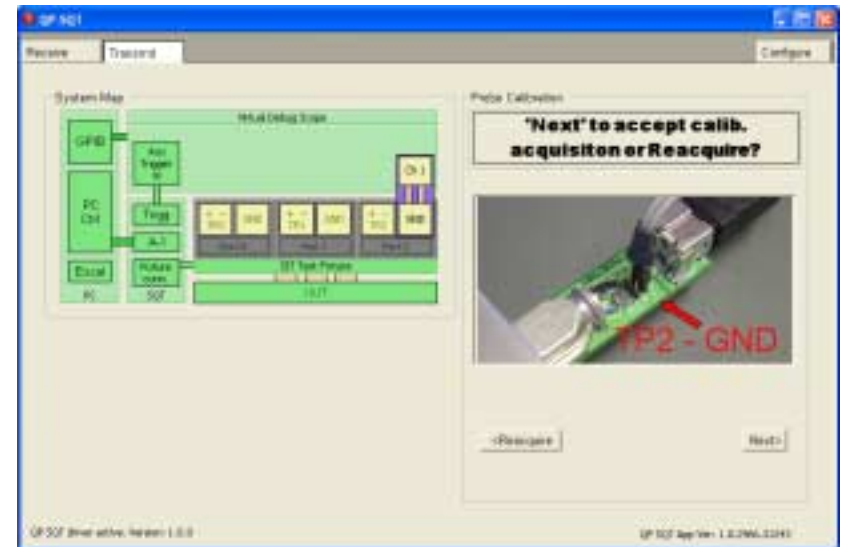


Figure 19 - Accept or recalibrate

After the calibration samples are written, the application offers a chance to reacquire them. If the oscilloscope display does not show a mostly flat trace near 0 volts, reacquisition will be required. This should be manually verified.

4.5 Port Test

4.5.1 Probe to TPx

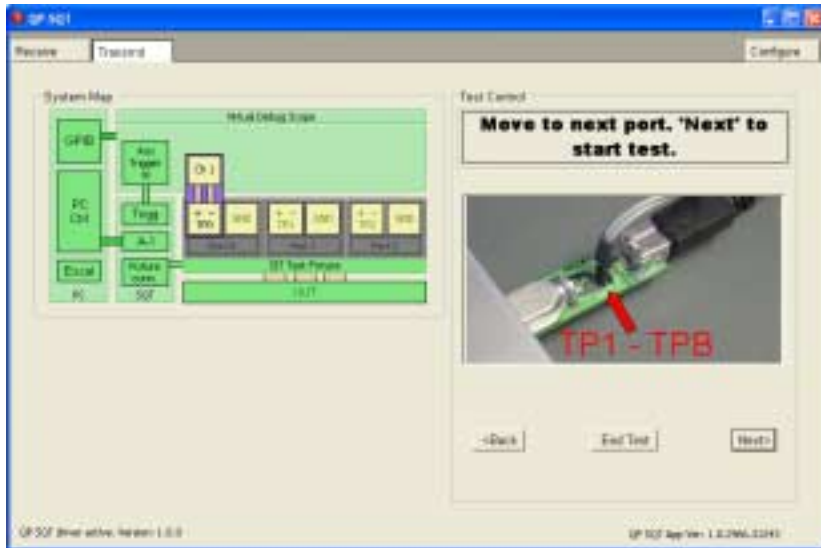


Figure 20 - Connection of probe for testing

The application now instructs the user to connect the probe to the test points of the next port to be tested, based on the selected ports to be tested and ports already tested. If the test point board only offers single port connectivity, for example the standard 9 pin 1394b test point board, the users should keep the oscilloscope probes connected to the same test point and move the test point board to the appropriate port.

Selecting “Back” at this point will return the user to the previous port or calibration acquisition step.

Verify the probe is connected to the proper test point and select “Next.”

The application will display “Testing Port x” and “Downloading Stream Data” as these actions are performed.

4.5.2 End Test Button

The end test button lets the user gracefully exit the test. When selected, the active report is closed and the user is directed to connect a new UUT.

4.5.3 Reacquire / Calculation



Figure 21 - Reacquire or Calculate results

After the samples are stored in the results file, the user may continue with result calculation or reacquire the samples for the current port under test.

If the oscilloscope display is not similar to the one shown below, does not show a captured signal oscillating above and below 0 Volts, the samples should be reacquired.

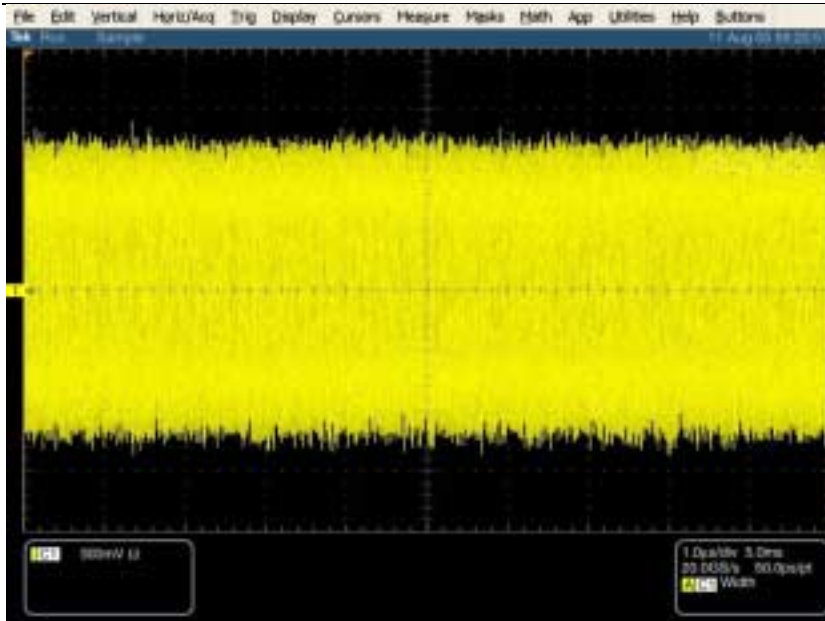


Figure 22 - Example oscilloscope capture

If this is the initial test and 1394b signal data is not captured, the user may re-arm the oscilloscope manually, click the Reacquire Button, then go back to the Options Page and select the Advanced Tab. On the Advanced Tabs the user may use the Test Tone Button (described in section 4.3.1.7) to troubleshoot the acquisition process without the lengthy automated capture process. After reasonable signals are seen, selecting the Options tab will allow the user to continue the automated process.

After appropriate samples are captured and written, the Calc button will initiate the Excel-based signal analysis routines.

4.5.4 Reacquire / Next

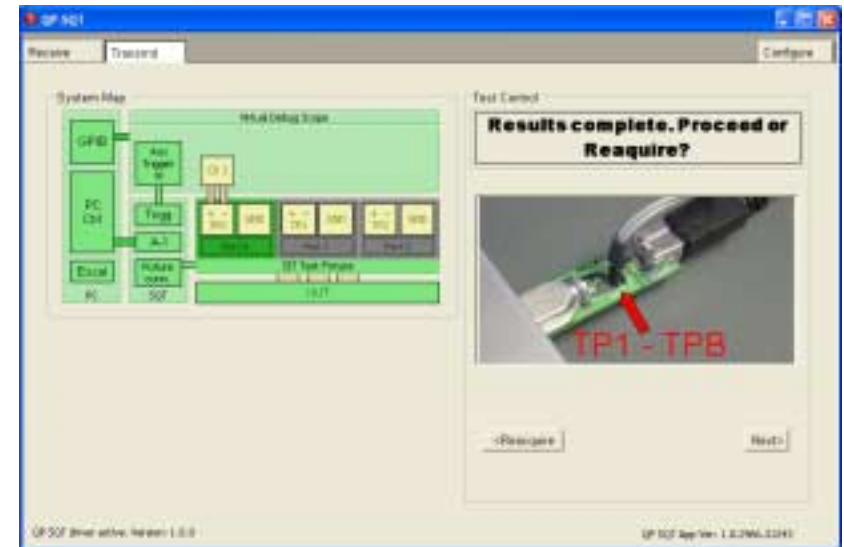


Figure 23 - Test results for port complete

After the result calculations are complete, the user has the opportunity to examine them and reacquire, if necessary, before proceeding with the rest of the test.

If the “Show Excel” option was selected in the advanced setup tab, the user may select the Excel file from the Taskbar and analyze the results before proceeding. The contents of the results file are described below.

Selecting “Next” will prompt the user to begin the next port test if there are more ports to test. Otherwise the application will proceed to test completion.

4.6 Single Ended Measurements

If the Single Ended option is selected on the Advanced Tab, differential skew and common mode voltage measurements will

be enabled. The following additional steps will be added to the test procedure.

Differential skew and common mode voltage are measured in a two-step process. Because the common mode voltage can vary from 0 to 2.5V the first step involves locating the common voltage using a 1V scale. After the common mode voltage is found the oscilloscope offset is adjusted to that value. The vertical resolution is increased to make the differential skew measurement. The same process is repeated after the oscilloscope probes are swapped.

NOTE: Not all differential probes support the possible common mode voltage of 2.5V. Currently SQT only supports Agilent oscilloscopes using differential probes for the single ended measurements. For other oscilloscopes two single ended probes are required.

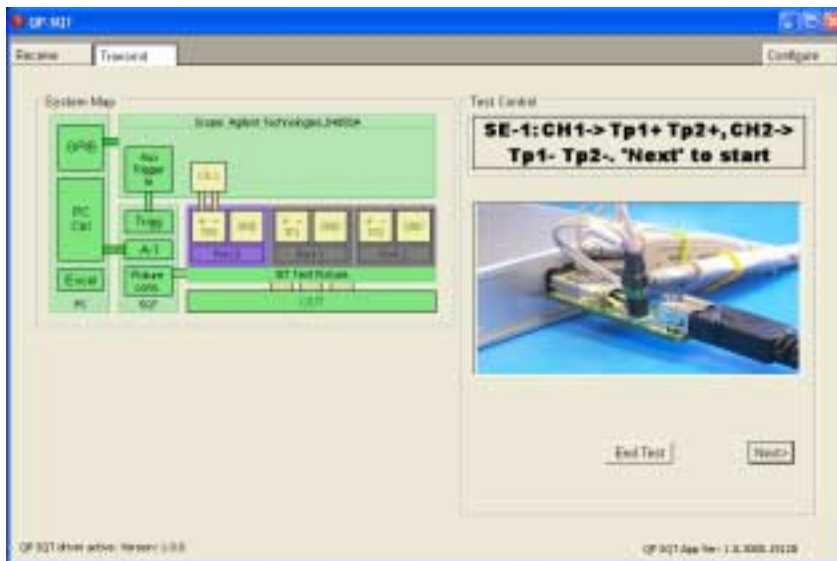


Figure 24 - First single ended scope probe connection

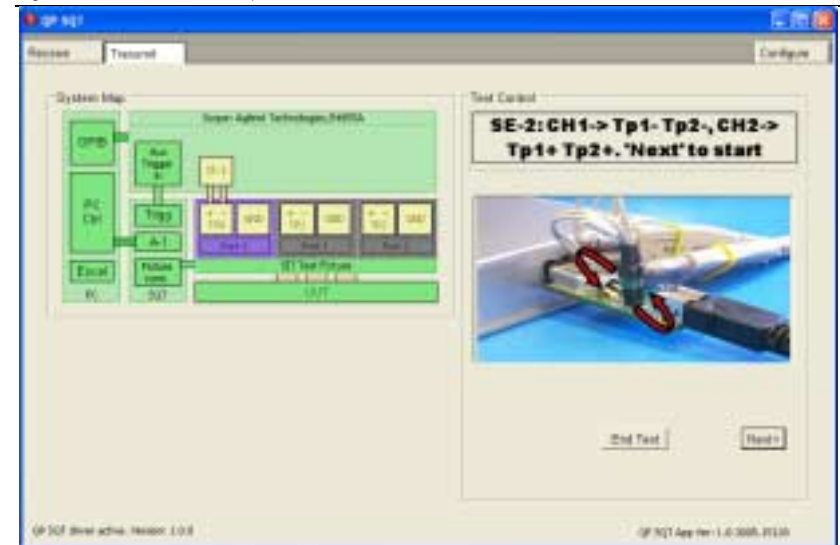


Figure 25 - Second single ended scope probe connection

4.7 Testing the Next Port

If needed, after completing the test for a particular port the user is instructed to configure the system to test the next port. The configuration of the test point board is dependant on the UUT; therefore, the exact test configuration may vary. For example, if UUT uses standard 9 pin 1394b connectors, only one port is serviced per connector. Likewise, the test point board for the standard 9-pin 1394b connector only offers single port connectivity. In this case the users should keep the oscilloscope probes connected to the same test point and move the test point board to the appropriate port. In many aerospace applications a single connector services multiple ports. In this case the test point board services the multiple ports; therefore, the users should move the oscilloscope probe to the appropriate test point as directed by the application.



Figure 26 - Testing the next port

4.8 Test Completion

4.8.1 Remove Test Point Board from UUT

The user is instructed to remove the Test Point Board from the UUT. When the user clicks “Next,” the Report file is saved and closed, whether or not it was visible.

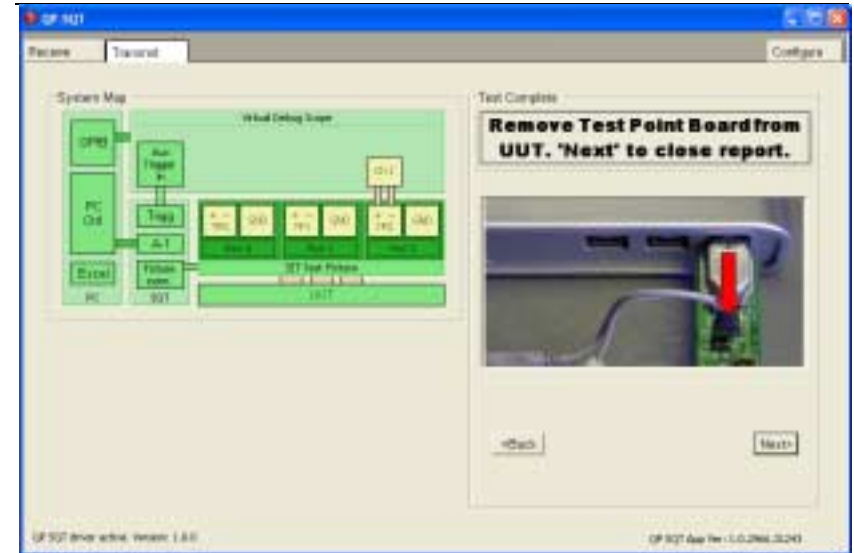


Figure 27 - Remove test point board

Selecting “Back” will return the user to reacquire the last port samples.

4.8.2 Next UUT

The transmit signal integrity test for the current UUT is now complete. Selecting “Next” will return the user to UUT Setup for another UUT.

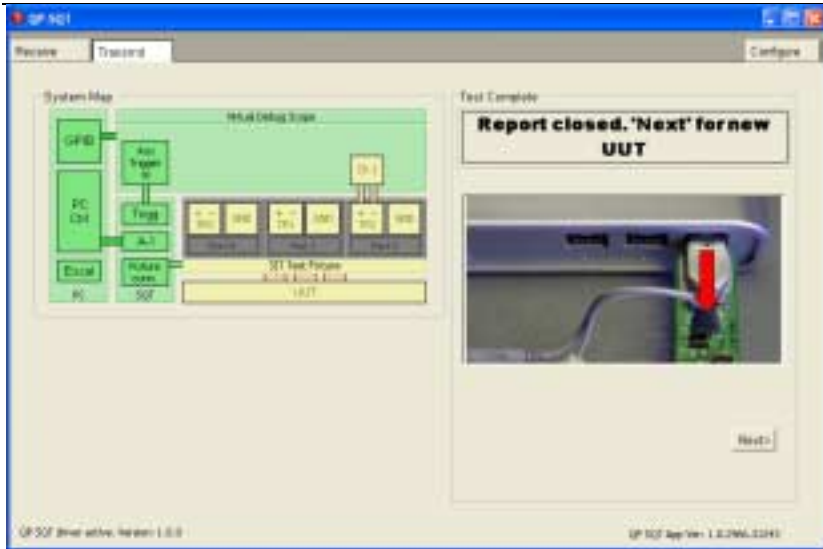


Figure 28 - Report closed and start next UUT test

4.9 Transmit Signal Integrity Results File

All port data and calculated results for each UUT test are stored in a single results file. By default transmit results are stored in the following directory:

C:\Program Files\Quantum Parametrics\QPSQT\TxRresults\

4.9.1 Summary Page

The Summary Page is the first page in the workbook. It provides the final results of all the port tests side-by-side and validates them against the specification standards. Values that do not meet specification are colored red. For convenience, the specification values are shown below the calculated results.

4.9.2 Port Pages

Each port test uses a worksheet to hold the raw stream data and the calculations used to provide results. Many of the intermediate calculations are erased after use to minimize file size and calculation time. All the important information from these pages is transferred to the Summary Page.

4.9.3 Eye Pages

An eye diagram page is created for each port test. This diagram displays all the samples in the jitter calculation range of the stream compared against the IEEE 1394 specified absolute and normalized eye masks. The yellow eye is the absolute eye based on the specification maximum and minimum differential voltage levels. The red eye is the normalized eye based on percentages of the calculated signal level. The green lines across the chart show this calculated signal level.

4.9.4 DFT Pages

A frequency domain jitter plot is created for each port test. After pattern based jitter is normalized, frequency based jitter is analyzed. The three lines in the jitter plot display the jitter initially, after normalizing the first frequency component, then after normalizing the second frequency component.

These plots can be used to identify strong frequency-based sources of jitter.

4.9.5 Setups Page

The setups page contains some data related to the test setup. There are no results on this page. There are no cells that should be changed by the user. The specification values are stored on this page. These values may be changed in the template should

the specification change. Typically, this page is hidden to simplify management of the results workbook.

4.9.6 Oscilloscope Pages

Setup and control information is stored on a separate worksheet in the transmit Excel file for each model of supported oscilloscope. There is no relevant user information on these pages. Typically, these pages are hidden to simplify management of the results workbook.

5 Receive Testing

5.1 Start Application

Execute the QPSQT.exe file. After the Signal Quality Tester (SQT) is connected select the Receive tab at the top of the window to begin receive testing.

5.2 Physical Configuration

5.2.1 Host Computer / Signal Quality Tester

If prompted on the main application window, connect the Signal Quality Tester to the host computer with an IEEE-1394 cable to one of the To Host PC ports on the front of the tester. Please see Figure 10 for details. If this connection is already made, the application may move to the next step. Under some circumstances the tester will need to be disconnected and reconnected to initialize the tester.

5.3 UUT Setup

5.3.1 Connect Unit Under Test

Connect the Unit Under Test (UUT) to the connectors labeled "Error Rate" on the front of the SQT.

When the UUT is properly connected, select the Next button. The ports are then verified to make sure that a connection can be established. Once this is verified the prompt will ask you to Name the Results File then click next; if this was done in the previous step, simply proceed by clicking the Next button.

5.3.2 Name Results File

The user interface next displays an input box to collect an identifier for the UUT. This identifier will be used in the file name and in the results summary.

The Append Timestamp to Filename check box may be selected to append a timestamp to the file name. This may be useful to allow many unique result files for one UUT.

Another input box is available to specify the path in which to store the results file.

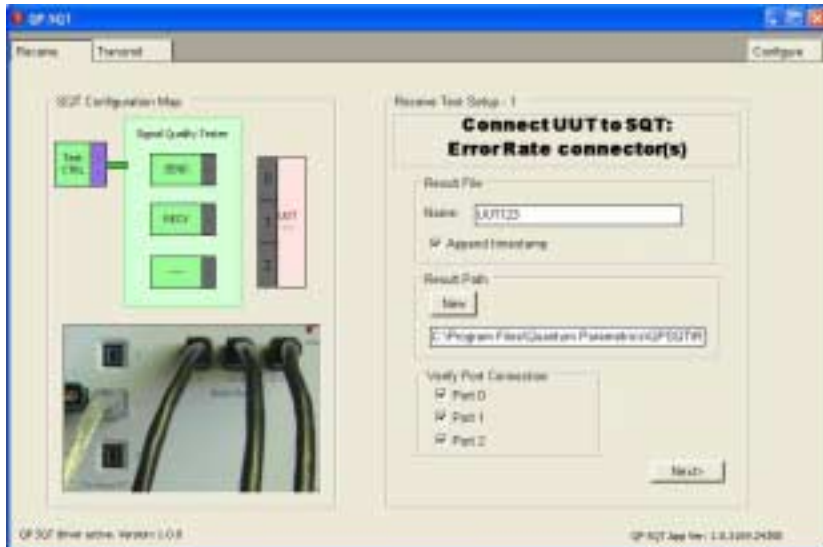


Figure 29 - Connection UUT to SQT

5.3.3 Test Options

Receive testing may be run to three different confidence levels:

- Debug
- Acceptance
- Qualification

The actual goal parameters for each of these levels are set in the Excel Receive template file. Typically Debug will take the least time, and Qualification will provide the best indication of error rate. The goals of the user will dictate which confidence level to select.

The Debug level test will always be run first on all selected ports; if Acceptance or Qualification is selected, they will proceed in turn on all selected ports. This enables a quick checkout of all ports before proceeding to longer tests. The Continuous radial button is not currently available, but will be made available for later revisions.

Checkboxes allow the test to be run on any combination or all of the 3 UUT ports. At least 2 Ports must be selected and connected and active in order for the test to be able to proceed.

5.3.4 Ports to Test and Test Levels

This section is for reporting status. The checkboxes display to the user which ports were selected to test on the initial page of the Receive Test.

Next to the check boxes are the levels at which the tests are currently set to run. These can not be changed manually at this time. To change them manually the user must use the back buttons to get to the start of the test which will make the configuration tab available. Please see the Calibration / Configuration Tab section below for more instructions.

5.3.5 Auto Set Level

This box allows the user to have the SQT program automatically find the levels at which the UUT fails and set the current test level accordingly.

The Start button starts the process of automatically finding the threshold level at which the device passes when running for a short period of time. This algorithm is run independently for each connection to the SQT Error Rate connectors.

The Stop button allows the user to abort the automatic process. Doing so will cause any values not set to revert to the previous test level.

The %Margin field allows the user to set a level of margin from the found lowest passing point. Example: If the user sets the %Margin to 10 and the algorithm finds that the DUT port fails at 200mV, the current test level for that port will be set to 220mV.

Please keep in mind that the SQT error rate outputs are calibrated to the output of the box at the Error Rate connectors.

Select “Next” after options and any advanced options are verified.

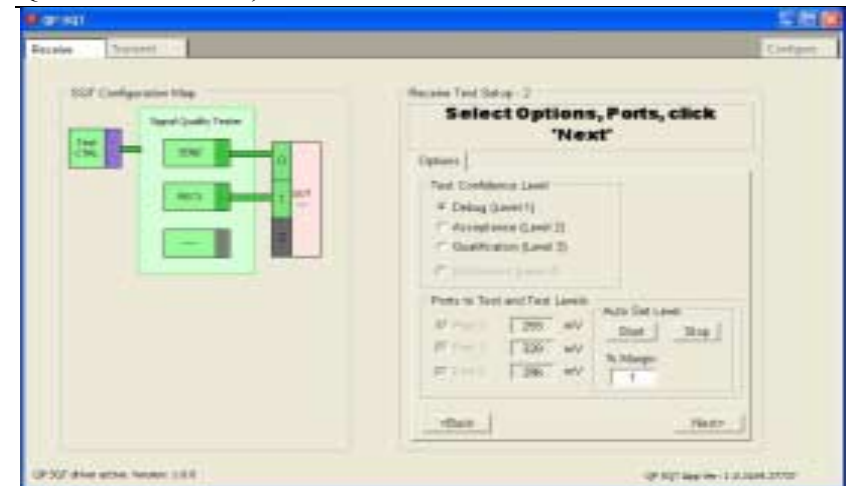


Figure 30 - Connection UUT to SQT

The SQT error rate outputs are calibrated to the output of the box at the Error Rate connectors.

5.4 Test Status Pane

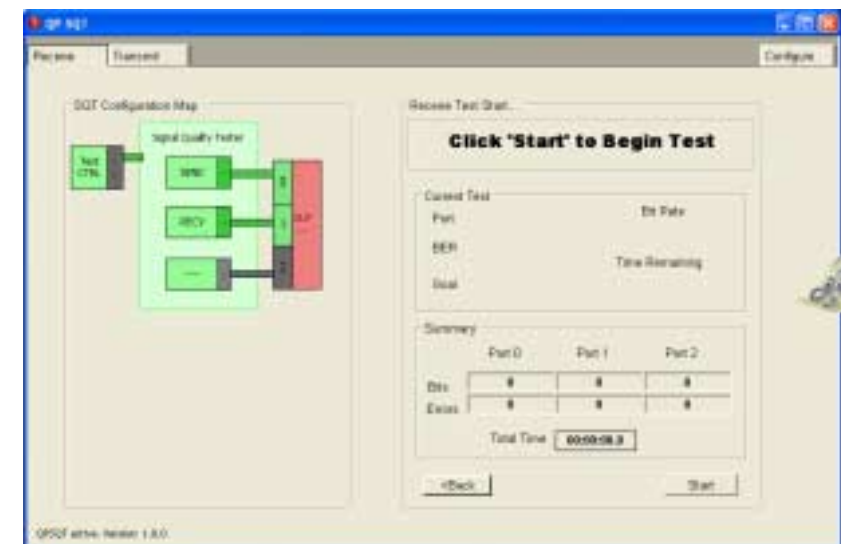


Figure 31 - Rx test status pane

Selecting the “Back” button allows the user to go back and set test options. Selecting the “Start” button actually configures the outputs and starts the test.

5.4.1 Current Test

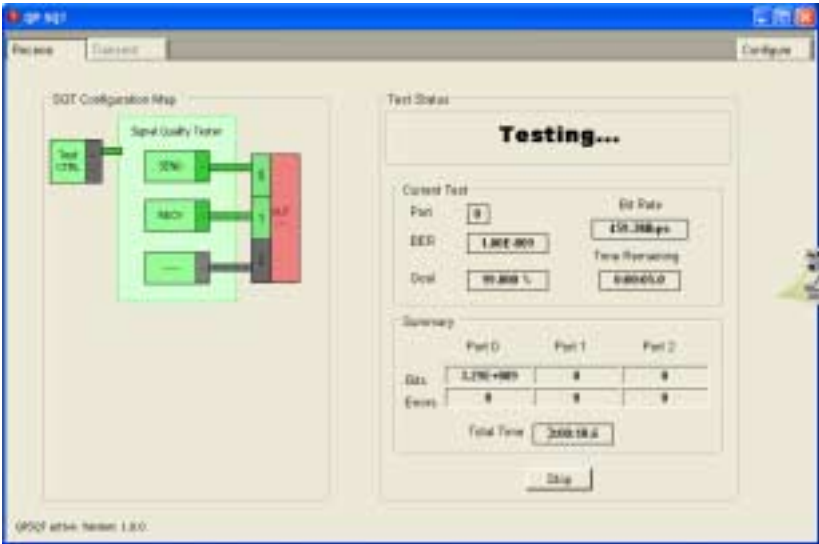


Figure 32 - Rx testing status pane

The “Current Test” frame identifies the current port under test, the current bit rate of the test, the bit error rate and confidence goals for the current test, and the estimated time remaining for the current port test.

5.4.2 Summary

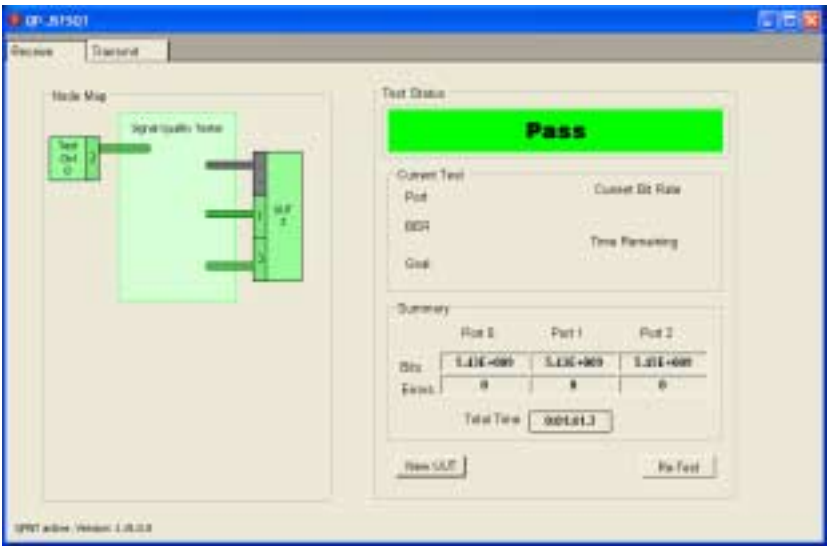


Figure 33 - Rx test summary pane

The “Summary” frame displays the cumulative results for all three ports of the UUT. It includes the number of bits sent to each of the ports, and the number of errors detected on each port.

The Total Time box tracks the cumulative total execution time for the current Unit Under Test (UUT).

5.5 Receive Signal Compatibility Results File

All port data and calculated results for each UUT test are stored in a single results file. For receive testing, all the information is in a single “Receive Results” worksheet, which by default is stored in the following directory:

C:\Program Files\Quantum Parametrics\QPSQT\Rx Results\

5.5.1 Parameters

The parameters are the bit error rate and statistical goals for receive testing (the sigma value for the goal is calculated by Excel). The goals are set in the receiveResults.xls template file which can be found in the C:\Program Files\Quantum Parametrics\QPSQT directory, and then copied into each new receive test. This enables organizations to select test requirements according to their individual needs, since there are no formally approved requirements.

The SQT system is configured for three progressively more difficult levels of receive testing, called Debug, Acceptance, and Qualification. The Debug level is for rapid checkout of a UUT. The Acceptance level is a more thorough check, possibly for 100% incoming inspection of new units. The Qualification level could be a very lengthy test for verifying first articles of new designs or selected samples of large lots.

5.5.2 Level

The Level cell contains the level selected from the user interface during the test setup.

5.5.3 Errors

The “Failure at:” Errors cell determines the number of errors at which a port test stops and failure is declared. This value is also set in the template file and applied to all subsequent tests.

5.5.4 Raw Data

The application records the number of bits sent to each port and the number of errors recorded on each port in the Raw Data Section.

5.5.5 Confidence

The Confidence section provides a statistical confidence that the given port meets or exceeds the given BER level, based on the current bit and error counts.

5.5.6 Bits Required / Remaining

The worksheet also estimates the number of bits required to meet the confidence goals. By subtracting the number of bits sent, it reports the number of bits remaining. This is used by the application to estimate remaining running time for the tests.

User Configurable Parameters			
	BER	Risk Goal	Z Goal (σ)
Debug	1.00E-10	95.000%	-1.64
Acceptance	1.00E-11	95.000%	-1.64
Qualification	1.00E-12	95.000%	-1.64

Level	Target
	1

Raw Data - Stored by Test System			
	Port 0	Port 1	Port 2
Errors	0	0	0
Bits	0.00E+00	0.00E+00	0.00E+00
Resets	0	0	0
Output (mV)	0	0	0
Data Rate	0	0	0

Test Result			
Confidence UUT is Compliant			
BER	Port 0	Port 1	Port 2
1.00E-10	0.000%	0.000%	0.000%
1.00E-11	0.000%	0.000%	0.000%
1.00E-12	0.000%	0.000%	0.000%

Bits required to reach risk goal			
BER	Port 0	Port 1	Port 2
1.00E-10	2.706E+10	2.706E+10	2.706E+10
1.00E-11	2.706E+11	2.706E+11	2.706E+11
1.00E-12	2.706E+12	2.706E+12	2.706E+12

Bits remaining to reach risk goal			
BER	Port 0	Port 1	Port 2
1.00E-10	2.706E+10	2.706E+10	2.706E+10
1.00E-11	2.706E+11	2.706E+11	2.706E+11
1.00E-12	2.706E+12	2.706E+12	2.706E+12

Stop Test at	10	Errors
--------------	----	--------

Figure 34 - View of templateReceive excel sheet parameters

6 Calibration/Configuration

6.1 Test Amplitude Level

The Test Amplitude and Calibration and the SQT amplitude are intermixed so both are discussed in this section. Both of these abilities are found on the Configure tab at the top right of the SQT application.

6.2 Near End and Far End Measurements

The amplitude coming out of the QP-SQT C-1, C-2 and C-3 port output levels may be measured at the Near End (at the SQT) or Far End (at the end of the cable connected to the SQT).

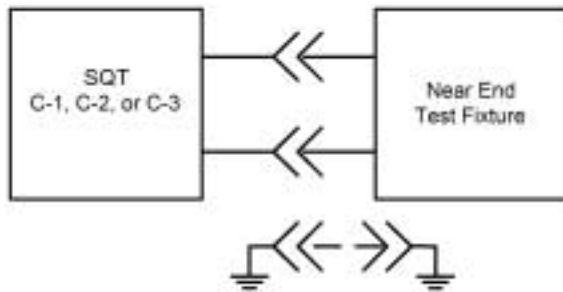


Figure 35 - Near End Measurement Block Diagram.

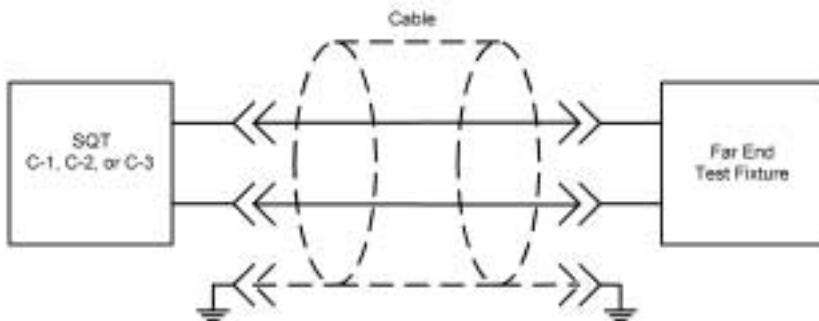


Figure 36 - Far End Measurement Block Diagram.



Figure 37 - C-1 Near End signal amplitude measurement.



Figure 38 - SQT to 38999 Far End test fixture setup.



Figure 39 - C-1 Far End signal amplitude measurement.

6.3 Observing Output Levels

The C-1, C-2, and C-3 may be observed by connecting the appropriate near end or far end test fixture to the desire port. Connect an oscilloscope to the appropriate test point on the test fixture. At this point tones from that port should be observable. An IEEE-1394b (beta) tone is a ~666us set of ~50MHz signals.

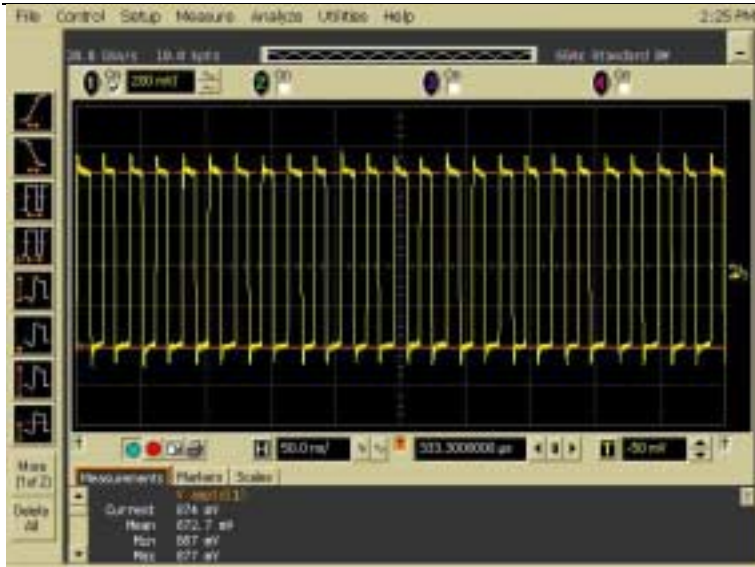


Figure 40 - Small Section of IEEE-1394b (beta) Tone

QP recommends setting the oscilloscope trigger, scale, and measurement as follows:

- Vertical scale to 200mV to 300mV
- Horizontal scale to 50ns
- Trigger to edge with a level of +/-50mV to +/-200mV
- Trigger delay to 333us (this will put the visible waveform roughly in the middle of the tone)
- Enable the Voltage Amplitude measurement. The actual 1 or 0 amplitude is $\frac{1}{2}$ the amplitude level provided by this measurement therefore the TEST LEVEL * 2 should approximately equal the Voltage Amplitude measurement.

6.4 When to Calibrate

In general, the SQT shouldn't need to be calibrated by the customer. The calibration values set by QP should be correct for that SQT. However there are cases, which QP is working to resolve, when re-calibration may be necessary. Additionally, in

the past it was common for customers to calibrate the SQT for changes in cable media. However QP would like to suggest that the Near End calibration values are adequate and should never be changed.

The Far End values indicate the attenuation of the cable media (Near End value – Far End value) and should be a fixed subtractor from the Near End value. Therefore, one Far End measurement should be adequate to determine the attenuation of the cable used for that test. The user should simply add that attenuation amount to the TEST LEVEL to achieve the desired level at the Far End.

Example: If the SQT output level is set² to 300mV and the Far End measurement yields 250mV then the test operator can assume the actual signal level at the Far End of the cable is always 50mV less than the voltage indicated by the SQT application for that cable. If the test operator wishes to achieve a Far End level of 300mV then they would set the TEST LEVEL to 350mV.

6.5 Adjust Test Levels

As mentioned in the previous section the user should rarely need to re-calibrate the SQT output. However the user may wish to adjust the output levels of C-1, C-2, and C-3 often.

6.5.1 Adjust All Ports

To adjust the output levels of all SQT Error Rate ports at one time:

- Select the Configure tab then
- Type the desired level into the *Default Test Level all port (mV)* entry section.

² Assumes SQT was calibrated using Near End measurement values.

- Once the level has been entered, select the Set button in that section.
- Once the Set button is selected the output is immediately changed.
- If the user wishes to make the new level the Default then the Save Changes button in the *Calibration Update* section should be selected.

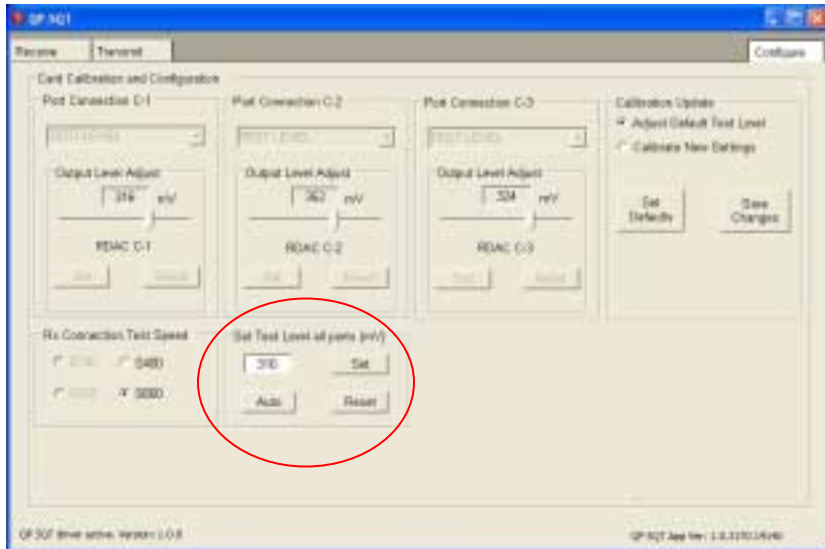


Figure 41 - Adjust output levels of all outputs.

6.5.2 Adjust Individual Ports

To adjust the output levels of C-1, C-2, or C-3 individually:

- The Calibrate New Settings radial button within the *Calibration Update* section should be selected.
- Once the radial button has been selected the three *Port Connection C-n* sections will become active.
- Using the pull down for the desired port select the TEST LEVEL option.
- Type the desired level into the Output Level Adjust.
- Once the desired level is entered select Set in that section.

- Once the Set button is selected the output is immediately changed.
- If the user wishes to make the new level the Default then the Save Changes button in the *Calibration Update* section should be selected.

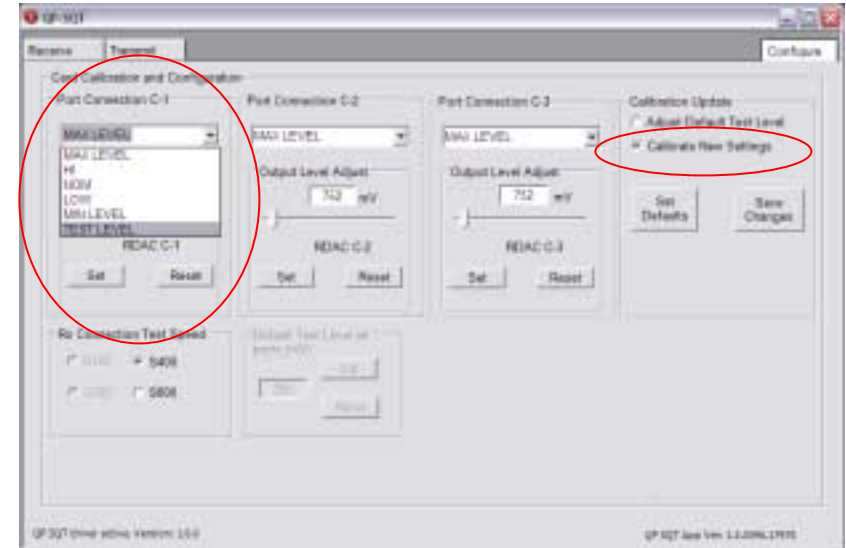


Figure 42 - Selecting TEST LEVEL option.

6.6 Calibrate

Calibration should only be needed if a major change to the SQT software required a new SQT_MOD.cfg file. In the future QP will change the application to protect against this as well.

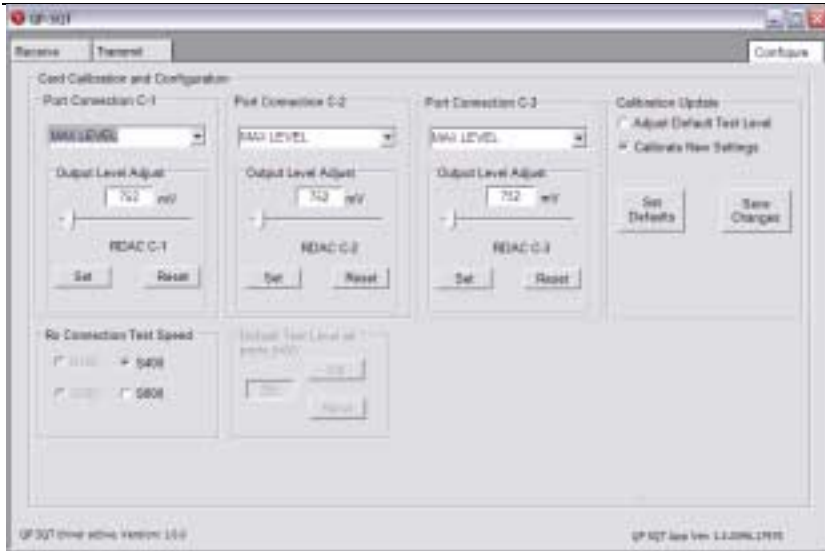


Figure 43 - Calibration Area.

6.6.1 Calibration Overview

To calibrate, an oscilloscope must be used to measure the voltage level for 5 points:

- MAX LEVEL
- HI
- NOM
- LOW
- MIN LEVEL

The user selects one of the 5 levels, measures the voltage, and then inputs the measured voltage in mV. This process is repeated for all 5 points.

From these 5 points, the SQT software calculates the TEST LEVEL requested by the user.

Quantum Parametrics calibrates each SQT C-1, C-2, and C-3 output at the near end before shipping to the customer.

6.6.2 Calibration Procedure

1. Open the QP SQT application and make sure the SQT box is connected.
2. Click the Configure tab
3. Select the Calibrate New Settings radial button in the Calibration Update section
4. For Port Connection C-1 do the following:
 - a. Select the Level pull down menu and select MAX LEVEL
 - i. Using an Oscilloscope, please measure the amplitude of the waveform on screen using the method defined below.
 - ii. Once measured, please enter the value into the Output Level Adjust text box
 - iii. Select the Set button
 - b. Select the Level pull down menu and select HI
 - i. Follow the steps ii – iii as was done in part a.
 - c. Follow the same process for NOM, LOW, and MIN LEVEL
5. Repeat Step 4 for C-2 and C-3

6.6.3 Measuring Amplitude procedure

This test procedure assumes toning will be used to measure signal amplitude and a QP far-end test fixture is used to terminate the signal and provide Oscop connection points.

1. Set the scope to trigger on CHn, rising edge, >50mV.
2. Set the scope so that the measurement is taken 333us after trigger (usually through horizontal delay)
3. Set the horizontal scale to 50ns/div.
4. Attach the far-end test fixture to the cable which is connected to the SQT Error Rate ports (C-1, C-2, C-3)
5. Attach CHn probe to the TPB's signal test points.
6. The scope should now be triggering on tones (~50Mhz ~50% duty cycle square wave) and displayed to the screen (please see Figure 40).
7. Now set up the scope to measure amplitude for CHn (scope dependent) and divide the mean value by 2.
8. This is the value that should be entered into the text box for CHn, and then select the SET button to save the value. NOTE: make sure to clear out the previous amplitude measurement between measurements.

*Note: In order to calibrate for the Near-End of the SQT box, follow the same steps as above using a Near-End Test Fixture plugged directly into the SQT.

7 GPIB/Ethernet Configuration

QP-SQT now comes with a GPIB over Ethernet capability so that the Oscilloscope no longer needs a standard GPIB connection. The application still allows for either GPIB or Ethernet to be used, so it is backwards compatible. National Instruments' VISA Runtime is required and may be downloaded for free from the NI website or run from the QP-SQT installation disk.

7.1 Configuring on First run

After clicking on the Transmit tab, the application will look for any connected GPIB devices. If it finds any available they will automatically show up in the Automation Resources window.

7.1.1 GPIB Resources

In the picture below, it shows that there are two resources available. The first one, GPIB0::INTFC, cannot be used to interface to the oscilloscope and will give an error if selected. The second one, GPIB0::1::INSTR, will let the user actually interface with the oscilloscope. To use this option, simply click to select, and then click the OK button.

In order to manually check for GPIB resources, click the Find Resources button and it will run the search again.

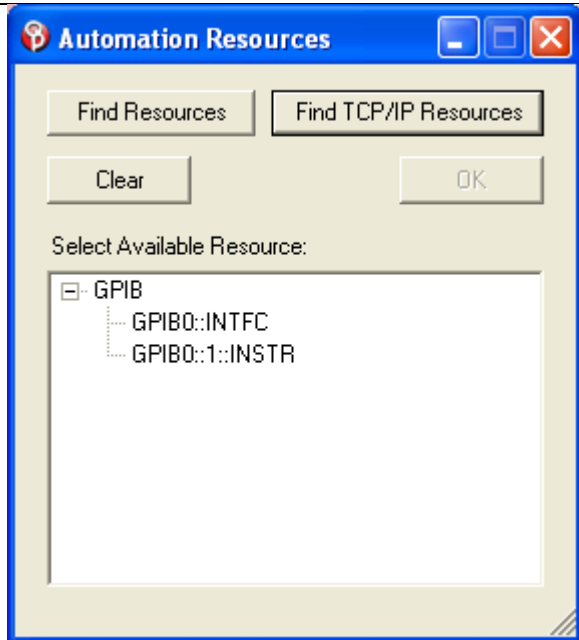


Figure 44 – Automation Resources with GPIB Resources

7.1.2 TCP/IP Resources

The Test host and oscilloscope must be connected over Ethernet in order for the scope to be found properly. If the two are already on the same network, then all the user needs is the IP address of the oscilloscope. In order to find the TCP/IP Resource, please select the Find TCP/IP Resources button in the Automation Resources window. This will pop up the TCP/IP Resource Verification Utility window. The circled area (TCP/IP Instrument Resources) is the one that we will refer to for the rest of this section; the TCP/IP Socket Resource is not currently used.



Figure 45 – TCP/IP Resource Verification Window

The user only needs to know the IP address of the device that they want to connect to in order to verify that the resource exists and that a connection can be made. Type in the IP address of the device in the Host Address section of the TCP/IP Instrument Resource block and click verify. This will bring up a list of any found TCP/IP resources at that specific IP address. If none are found, please verify the IP address and that the scope is setup for this kind of connection.

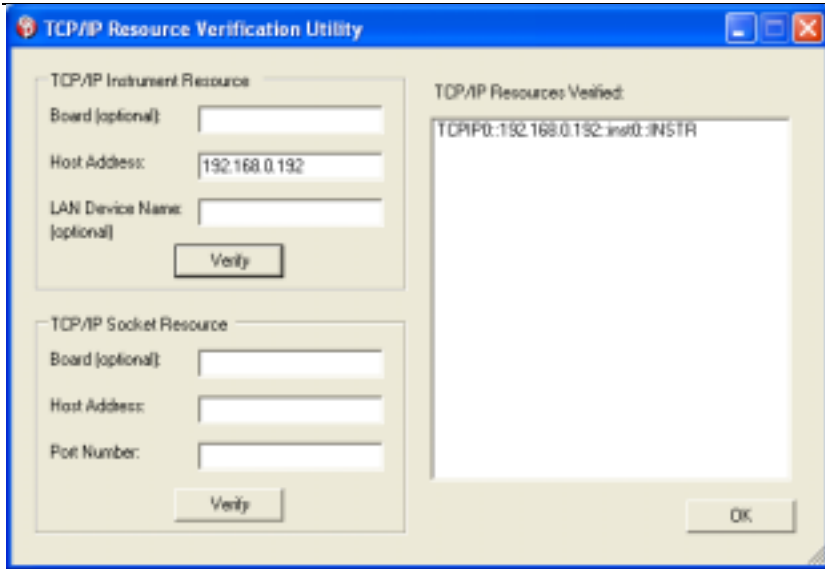


Figure 46 – Resource found

Once the resource has been verified, select that resource in the TCP/IP Resources verified list; in this case it is TCPIP0::192.168.0.192::inst0::INSTR. Then select the OK button in the lower right corner.

Now the Automation Resources window will have that TCP/IP resource listed. To use the resource, select it, and then select OK.

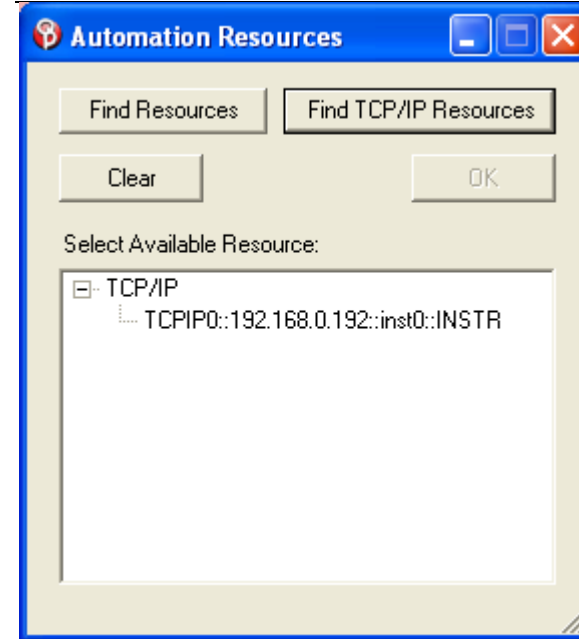


Figure 47 – TCP/IP resource selection list

7.2 Changing Devices

Once the user has successfully selected a device, it will be saved in the configuration file. When the application starts each time after that, it will try to connect to the last device that was used, eliminating the need to find the resource every time. If for some reason the resource is not found, an error will pop up stating this and the Automation Resources screen will come up to allow selection of a new device.

If for some reason after starting the application the user would like to change the device, there is a Change OScope button on the first screen when entering the Transmit test. This button can be used to bring up the Automation Resources window and a new device can be selected.

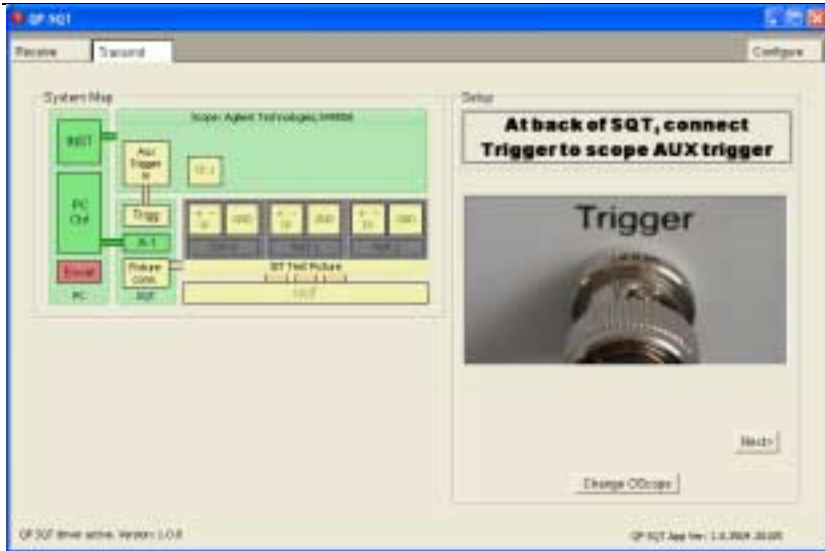


Figure 48 – Change OScope button

8 System Requirements and Installation

QP-SQT runs on the IBM PC compatible family of computers with a 1.5 GHz Pentium IV processor or greater. Currently QP-SQT only runs under Windows XP.

A National Instruments IEE488 GPIB or compatible adaptor is required.

A digital sampling oscilloscope with appropriate probes is required.

MS Excel version Office 2003 is required.

Oscilloscope support is limited. Please contact QP for the most recent list of supported oscilloscopes.

8.1 Software Installation

1. This installation requires any version of Win-XP to be installed on the target PC.
2. If a previous version of “QP SQT Tester” is present on the target system, first perform an un-install of the “QP SQT Tester” using the provided uninstaller in the QPSQT program directory.
3. Insert the “QP SQT Tester” CD. If target computer is configured for Autorun from CD media then the setup and installation will begin automatically.
 - o If Autorun is not enabled on your computer you can start setup by going to Windows Explorer and right clicking on the installation CD drive icon and selecting ‘autoplay’ from the drop down menu. This will automatically run the installation.

4. Follow all prompts.
5. If multiple OHCI devices are detected, the QPInstaller will prompt for a device selection after the “QP SQT Tester” installation completes. Select the OHCI device that you want to install the driver for and click ‘OK’.
 - The first run of the application will install the QPTntVdrv virtual device driver. You will be prompted through this operation with the “Found New Hardware Wizard”. This installation will only occur on the initial run of the “QP SQT Tester”
 - You are now ready to start using the “QP SQT Tester”

9 Error Rate Port Parametrics

QP-SQT-4 and -8 Receive Tester C-1, C-2 and C-3 Output Characteristics

Nominal Temperature (25°C)

Please see the Calibration/Configuration section for details of how to calibrate the outputs.

Output	Min	Typ	Max	Units	Comments
Guaranteed TPB Differential Output Level (-4 and -8)	200 ³		675 ⁴	mV	Applies to all Rx Tester ports
⁵ Variation in TPB Differential Output Level from Minimum to Maximum Level (-4 and -8)	-15	-/+ 6	+15	mV	Applies to all Rx Tester ports

³ Levels below 200mV may be obtained but are not guaranteed.

⁴ Levels above 675mV may be obtained but are not guaranteed.

⁵ At levels below 200mV and above 675mV the variation may exceed these levels

10 How to Contact Quantum Parametrics LLC

Quantum Parametrics LLC may be contacted
by phone at:

(719) 592-1394 (USA)

or by email at:

info@quantumparametrics.com or visit our web site at:

www.quantumparametrics.com